DVDO EDGE

High Definition Video Processor & Hub

Setup Guide

Version 1.0

This Setup Guide presents setup and configuration guidance for* DVDO EDGE *in summary form. For more complete information please refer to the* DVDO EDGE Product Manual *included on the CD.

Customer Support Information

email: edgesupport@dvdo.com

phone: 1-877-382-EDGE (1-877-382-3343)

web site: www.dvdo.com/edge

Check the web site for news and updates for your DVDO EDGE

To learn about VRS Video Processing Technology, visit
http://www.anchorbaytech.com/vrs_technology/

DVDO by Anchor Bay Technologies

983 University Avenue, Building A

Los Gatos, California 95032 USA

System Configuration: Most people will use one of the two configurations shown on this page and the next.

Digital Display Using Built-in Audio

For this configuration to work, your display should have HDMI input and built-in audio. Connect your source components (DVD Player, Set Top Box, Game console, etc.) to EDGE's inputs. Connect EDGE's Video/Audio HDMI output to your display.

The DVDO universal remote can control EDGE and up to 7 other components in your system.

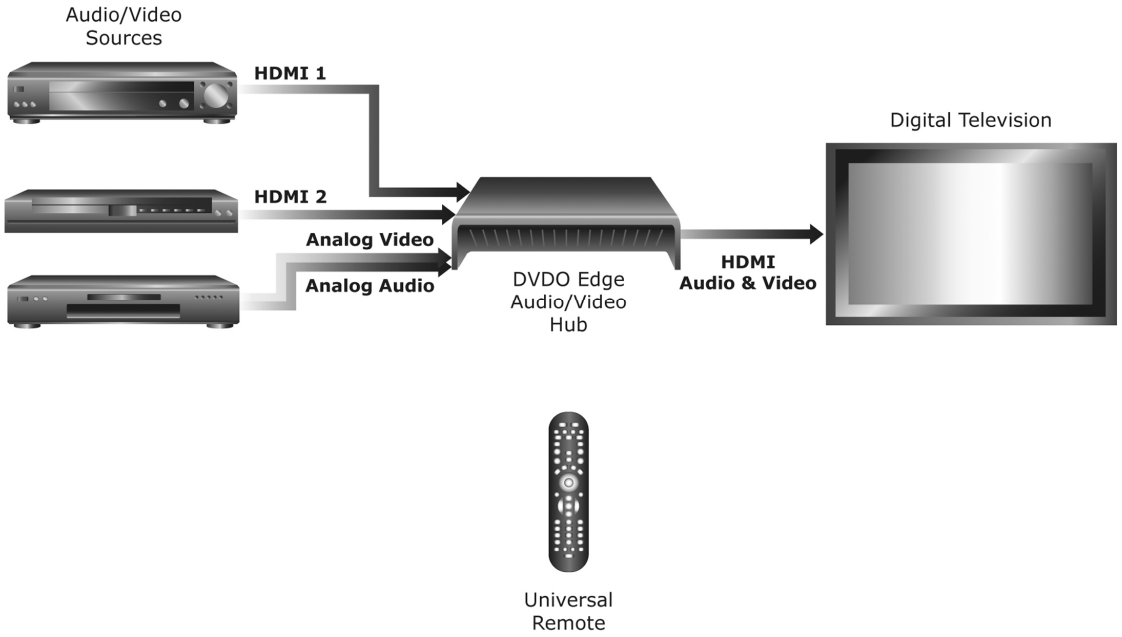

Digital Display with a Separate AV Receiver

This configuration features a separate AV Receiver for audio processing. Your Display must have either an HDMI or DVI input. If the Display has DVI input, you will need an HDMI to DVI adapter cable. Your AV Receiver can be connected using HDMI or Optical cables. Details of the Display and AV Recveiver connections are shown on the next page.

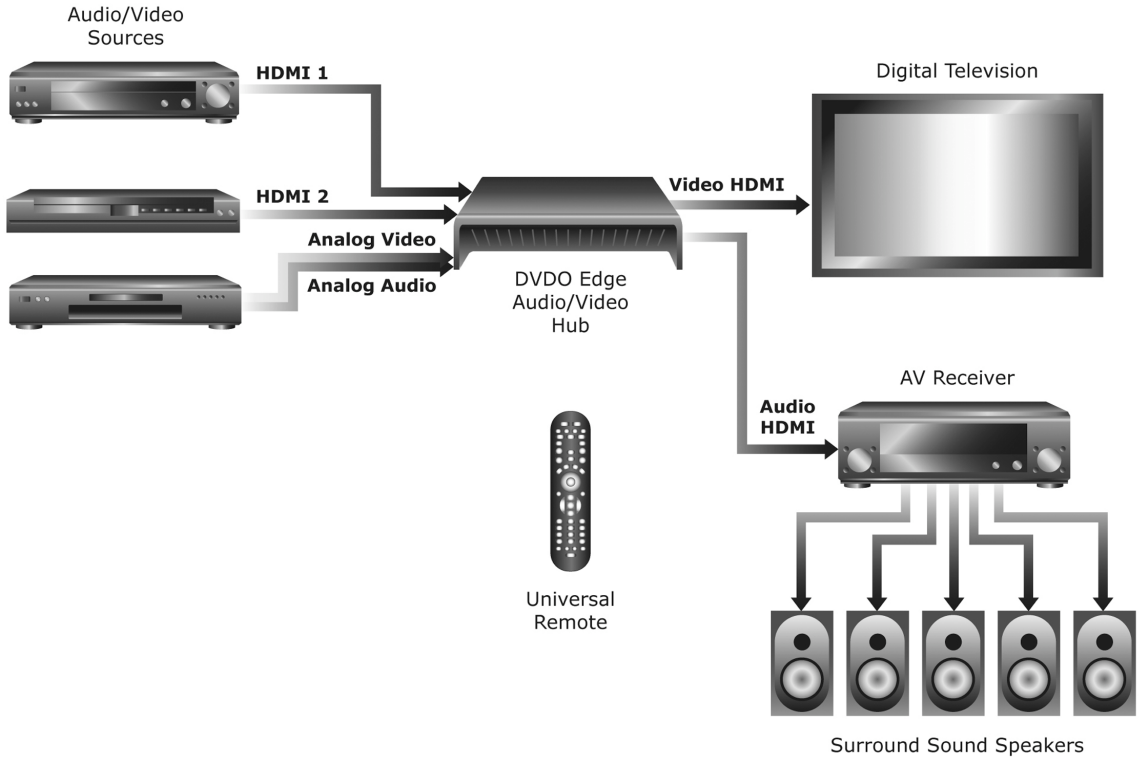

EDGE Output Connections

DVDO Edge -- Rear View of output Connectors

Connect your TV to the Video/Audio output.

Connect your AV Receiver to the Audio Only HDMI output if the Receiver has HDMI.

OR

Connect your AV Receiver to the Optical Audio Out connector if your Receiver does not have HDMI.

1. If you don't have an AV Receiver, skip to # 2.

If your AV receiver has HDMI input, connect an HDMI cable from Edge's Audio Only HDMI output to an HDMI input on your AV receiver.

If your AV Receiver does not have HDMI, connect an Optical cable from the Optical Audio Out to an optical input on your AV Receiver.

Use your AV Receiver's remote to power on the AV Receiver and set its input to Edge.

2. Connect your TV.

If your TV has HDMI input,connect an HDMI to HDMI cable from Edge's Video/Audio output to an HDMI input on your TV.

If your TV or monitor has DVI input, you will need an HDMI to DVI adapter cable. Connect the HDMI end to Edge's Video/Audio HDMI output and the DVI end to your TV or monitor.

Use your TV's remote to power up and set its input to Edge.

Plug in Edge's AC cable (if you haven't done so already).

Display Wizard: Step 1, Configure Your Outputs

EDGE automatically chooses a *Display Name*, *Video Output Format*, and *Audio Output Connector*. Use the Display Wizard to make any changes you would like, OR accept the automatic settings, and EXIT the Wizard (Left Arrow).

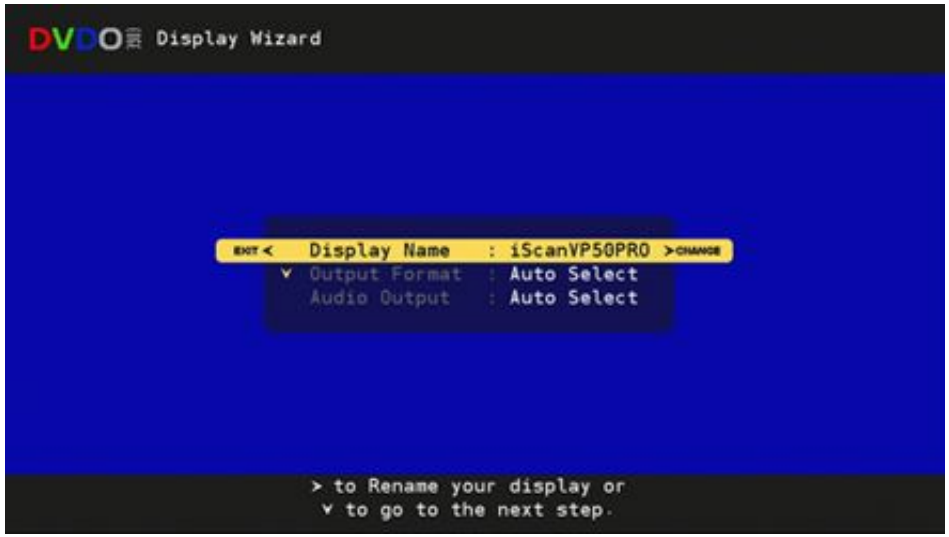
DVDO Display Wizard
EXIT < Display Name : iScanVP50PRO >CHANGE
v Output Format : Auto Select
Audio Output : Auto Select
> to Rename your display or
v to go to the next step.

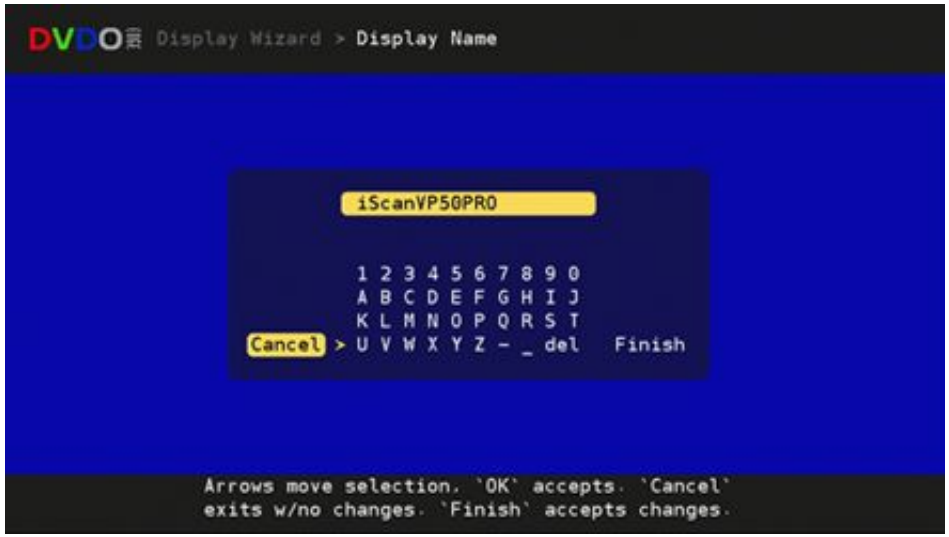
DVDO Display Wizard > Display Name
iScanVP50PRO
1 2 3 4 5 6 7 8 9 0
A B C D E F G H I J
K L M N O P Q R S T
Cancel > U V W X Y Z - _ del Finish
Arrows move selection. 'OK' accepts. 'Cancel'
exits w/no changes. 'Finish' accepts changes.

You should see the Display Wizard on your TV as shown left. The Display Wizard assists setup of your TV and your audio.

Using Display Wizard, you can
1. **Name your Display.**
2. **Select an output video format.**
3. **Select an output connector for audio.**

If you don't want to change anything, press **Left Arrow** to Exit the Wizard.

1a. Name your Display

If you want to change the name of your display, press **Right Arrow** to go to the on-screen keyboard.

Otherwise, press **Down Arrow** to go to the next setup step 2.

1b. Name your Display - Keyboard

Use this on-screen keyboard to rename your display.

When you are finished, highlight "Finish" then press **OK** to accept the new name.

If you want to exit the keyboard screen with no changes, highlight "cancel" then press **OK**.

Display Wizard: Step 2, Video Output Format

EDGE automatically chooses a *Video Output Format* by polling your display for its preferred format. Or, you may use the Display Wizard to change your *Video Output Format* as shown on this page.

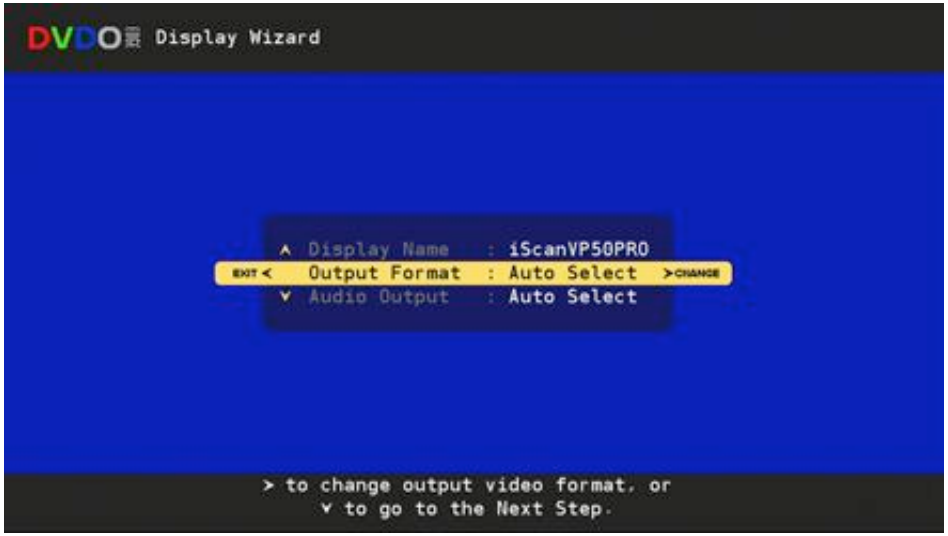

2a. Select an output video format.

EDGE defaults to "Auto Select" and communicates with your TV to find the TV's preferred format.

If you want to change the output format, press Right Arrow to go to the Output Format screen, shown below.

Otherwise, use Down Arrow to use the preferred format, and proceed to the next step 3.

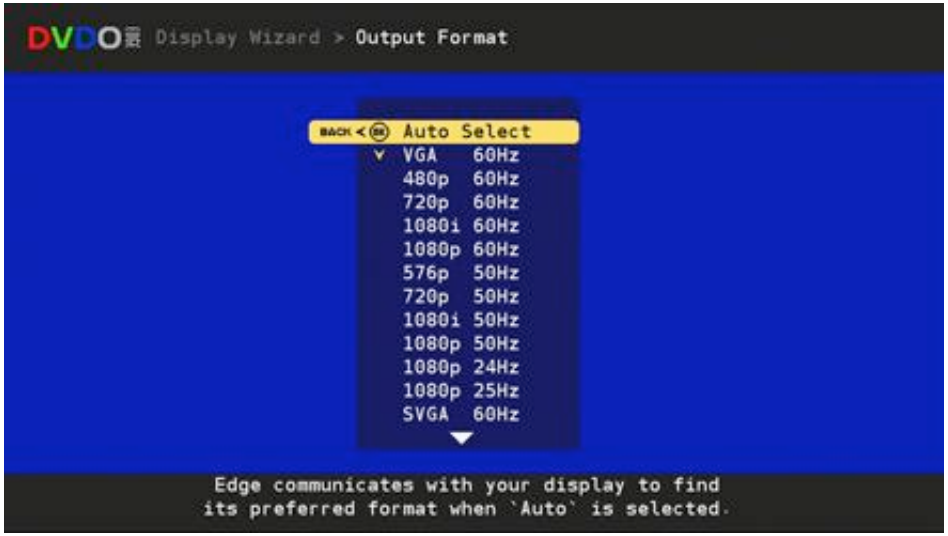

2b. Output Format Selection.

Use the Down Arrow to highlight the output format you want, then press OK.

EDGE will switch to the new output format. You will have to confirm that you can see a picture within 10 seconds. If you don't confirm, EDGE assumes that you can't see the picture and will return to the previous format.

Display Wizard: Step 3, Audio Output Connector

EDGE automatically chooses an *Audio Output Connector*. Or, you may choose an *Audio Output Connector* manually using the Display Wizard, as shown on this page.

DVDO Display Wizard
Display Name : iScanVP50PRO
Output Format : Auto Select
EXIT < Audio Output : Auto Select >CHANGE
> to change audio output connector
v or EXIT exits wizard.

DVDO Display Wizard > Audio Output
BACK < Auto Select
v Video HDMI
Audio HDMI
Optical
`Auto` provides an easy way to switch between
a Receiver and TV by powering up/down receiver.

3a. Select an audio output connector.

You have 4 choices for audio output:

A. Auto: Default setting.

Automatically chooses an output depending on the capabilities of the attached, powered-on components.

B. Video HDMI: Outputs audio on the Video HDMI connector.
Use this setting if your TV has audio capability and you don't have (or don't want to use) an AV Receiver.

C. Audio HDMI: Outputs audio on the Audio HDMI connector.
Use this setting if you have an HDMI capable AV Receiver.

D. Optical: Outputs audio on the Audio Optical connector.
Use this setting if you have an AV Receiver that does not have HDMI input.

Make a selection and/or press < to exit this screen.

You finished with your Video and Audio output setup.

Left Arrow Exits Display Wizard

Input Wizard -- Configure Your Inputs: Step 1, Naming an Input

Input Wizard guides you through *Naming an Input*, *Setting Input Priority* (for automatic input switching), and *Associating an Audio Input* with a Video Input.

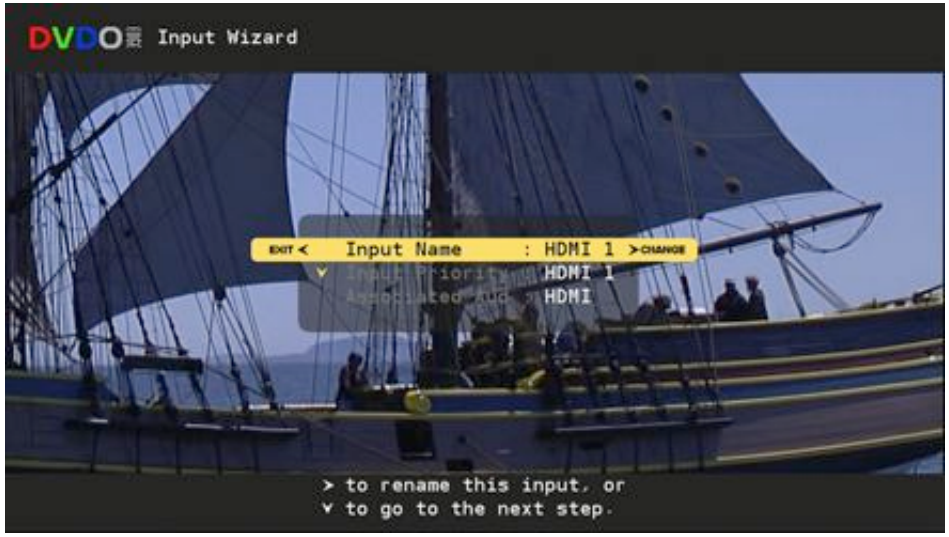

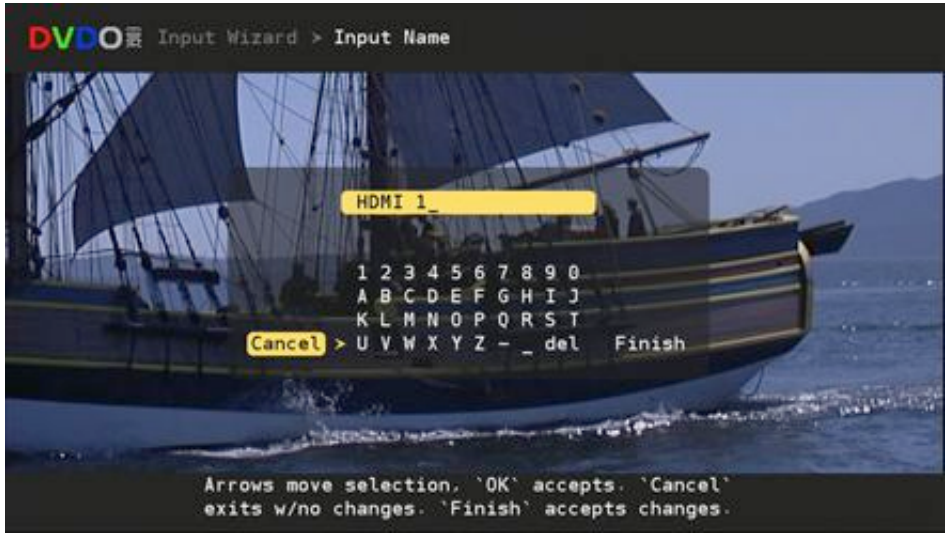
DVDO Input Wizard > Input Name
HDMI 1_
1 2 3 4 5 6 7 8 9 0
A B C D E F G H I J
K L M N O P Q R S T
Cancel > U V W X Y Z - _ del Finish
Arrows move selection. `OK` accepts. `Cancel`
exits w/no changes. `Finish` accepts changes.

Input Wizard guides you through the setup of your input components. You can run the Input Wizard for every input component.

Using the Input Wizard, you may

1. **Rename an input component.**
2. **Set an Input Priority for the component.**
3. **Associate an Audio Input with the video input.**

1a. Input Name

Use the on-screen keyboard to rename this input, or press Down Arrow to go to step 2.

1b. Input Name - Keyboard

Use this on-screen keyboard to rename your display.

When you are finished, highlight "Finish" then press **OK** to accept the new name.

If you want to exit the keyboard screen with no changes, highlight "cancel" then press **OK**.

Input Wizard: Step 2, Set Input Priority

Input Priority **is used to select inputs if EDGE is set for Auto Input Select, which is the default. If one or more inputs has active signal, EDGE will choose the active signal with the highest priority. You may use the Input Wizard to change priority as shown on this page.**

2a. Set Input Priority

Input Priority is used to automatically select inputs when EDGE is in Auto Input Select mode, which is the default.

If EDGE is in Auto Input Select Mode, and multiple inputs are powered on, then EDGE will select the input with the Highest Priority.

If you don't want to change Input Priority, press **Down Arrow** to go to step 3.

2b. Change Input Priority

To change Input Priority put the highlight bar over the input you want to change then press **OK**.

Use **Down Arrow** to move the selection, then press **OK**

Input Wizard: Step 3, Associate an Audio Input

Associate Audio **is used to create an audio/video pair of inputs (for non-HDMI inputs). The pair will switch together when you switch input components.**

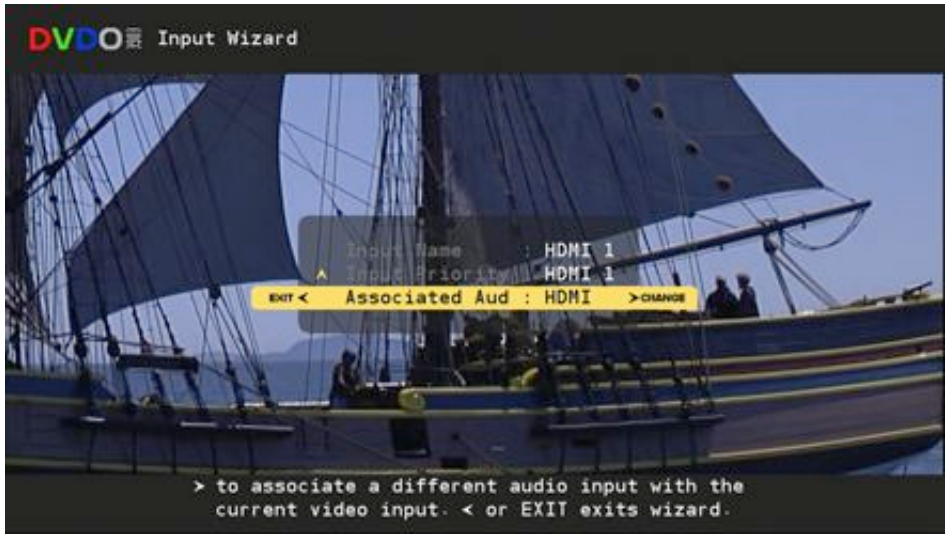
DVDO Input Wizard
Input Name : HDMI 1
Input Priority : HDMI 1
EXIT < Associated Aud : HDMI >CHANGE
> to associate a different audio input with the current video input. < or EXIT exits wizard.

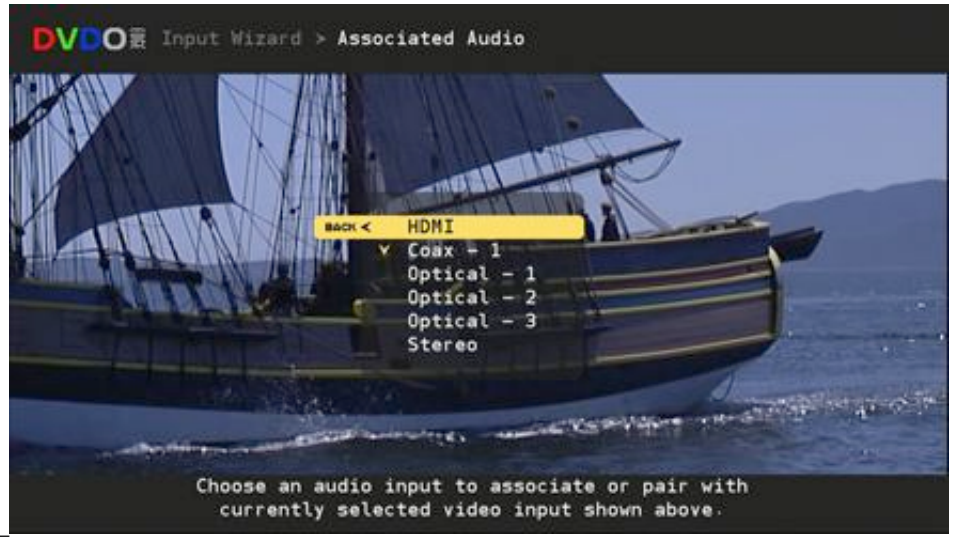
DVDO Input Wizard > Associated Audio
BACK < HDMI
v Coax - 1
Optical - 1
Optical - 2
Optical - 3
Stereo
Choose an audio input to associate or pair with currently selected video input shown above.

3a. Associate Audio

"Associate Audio" is used to create an audio/video pair of inputs that are switched as a unit.

If your source component does not have HDMI output, then you have set upEDGE so that it treats a video input and an audio input as a pair for switching.

"Associate Audio" lets you choose the audio input that is paired with the current video input.

If you are using HDMI input, you do not have to Associate Audio; you can exit the Input Wizard.

3b. Choose an audio input.

Choose the audio input that you want to Associate with the current video input.

You are finished setting up this input component.

Left Arrow Exits Input Wizard

DVDO Universal Remote

Using the Remote to Control Edge

The remote control that comes with your DVDO Edge is a universal type. It can control your edge plus 7 other components in your system.

The remote must be in DVDO mode to control Edge. Then the buttons shown on the right will work as described.

The Picture Shape buttons on the bottom of the remote will work anytime, independent of the remote's current mode.

Hint:
The DVDO Universal Remote operates in "Modes." It becomes the remote for a particular component in your system when it is put into the Mode for that component.

To see what mode the remote is currently in, push the OK button. One of the component buttons will light up, telling you the mode. (The other mode buttons are just below the power buttons).

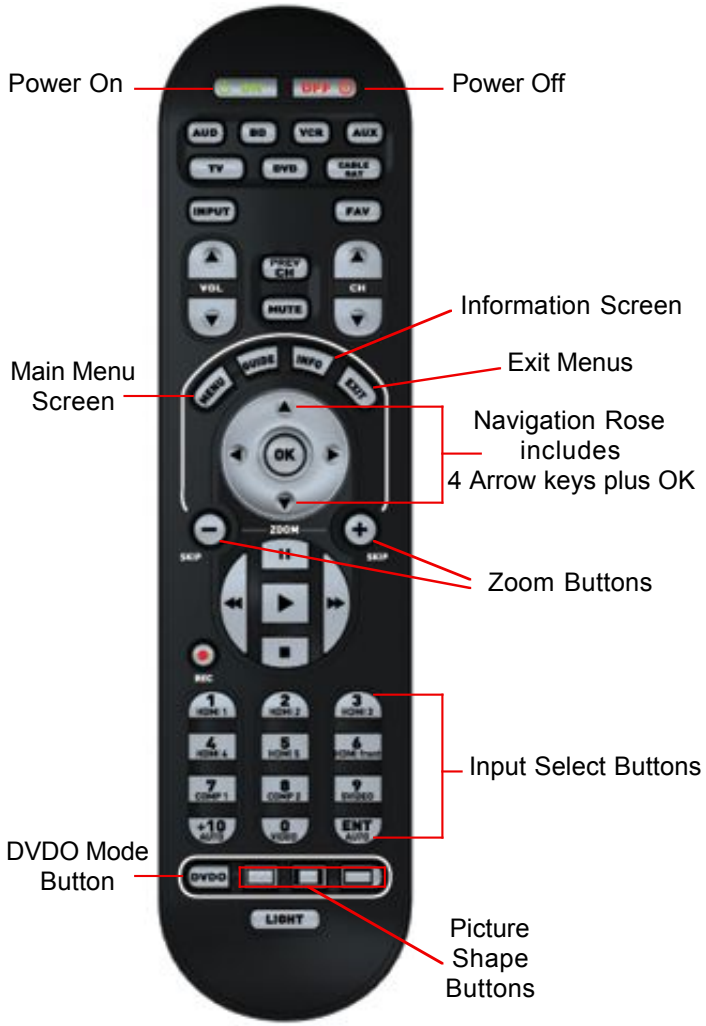

DVDO Universal Remote: Programming the remote using the Preprogrammed Code Method

The *Preprogrammed Code Method* using 3 digit codes is a simple way to program the DVDO Universal Remote. Other methods are described fully in the DVDO EDGE Product Manual on the CD.

Programming the remote using the preprogrammed 3 digit code method.

Step 1] Turn on the device you want to operate manually.

Step 2] Press the Device button and the OK buttons simultaneously and hold for 3 seconds until the Device LED turns on. (The LED will stay on for 20 seconds. The next step must be entered during this period).

Step 3] Point the remote control toward the device and press in the first three-digit Setup Code number for that device using the number buttons(0-9) on the remote control. (The Device button LED will blink once for each button pressed).

Tip) Your device will turn off when the corrected Setup code number has been selected. If the device does not turn off, press in the next Setup Code numbers until your device turns off.

If you have tried all of the Setup Code numbers listed and it still did not turn off, please proceed to the **Auto Search Method,** described in the DVDO EDGE Product Manual.

Step 4] Once your device turns off, press the Device button selected in the Step]2 once again to store the Setup Code number. (The Device LED will blink three times to confirm that the code has been stored).

Step 5] Please repeat the above steps to program the remote control for each of other devices.

Code Tables appear on the following pages. A more complete list of tables in available in the DVDO EDGE Product Manual on the CD. Table names correspond to component buttons on the remote. The table below lists the remote's component button names and corresponding code tables.

Component Button	Table Name
Aud	**AV Receivers and audio processors**
BD	**Blu-ray & HD DVD**
VCR	**VCR, TV/VCR Combos**
AUX	**PVR, TIVO, Gaming Systems**
TV	**TV**
DVD	**DVD**
Cable/SAT	**Cable Boxes, Satellite Boxes**

Code Tables: TV.

Manufacturer/Brand	Set-Up Code Number
ABEX	025
ADMIRAL	072 251 161 160
ADVENT	247
ADVENTURA	002
AKAI	197 146 248 473 474 475
A MARK	112 143
AMPRO	167 073 157 183
AMSTRAD	052
ANAM	043 054 056 080 112
AOC	197 004 112 058
APEX DIGITAL	006
ASTAR	477
AUDIOVOX	076
BARCO	233
BELCOR	116
BELL&HOWELL	161 072
BLAUPUNKT	088
BROKSONIC	238
BROCKWOOD	116
CAIRN	201
CANDLE	197 002 003 004
CAPEHART	058
CELEBRITY	070
CENTURION	197
CETRONIC	043
CITIZEN	197 002 003 004 043 101 103 143
CLASSIC	043
CLP CLASSIC	161
COLORTYME	116 197
CONCIERGE	073 157 183
CONCERTO	004
CONTEC	043 050 051
CORNEA	116
CORONADO	143
CRAIG	043 054
CROWN	043 143
CURTIS MATHES	197 101 004 143
CXC	043
DAEWOO	004 016 043 044 076 103 114 125 127 143
DAYTRON	004 143

Code Tables: TV.

Manufacturer/Brand	Set-Up Code Number
DELL	319 320 321
DIMENSIA	161
DREAMVISION	235
DUKANE	011 025
DUMONT	116 073 157 183
DURABRAND	096
DWIN	177 257
DYNASTY	043
DYNATECH	062
DYNEX	400
EIKI	187
ELECTROBAND	070
ELECTROGRAPH	466
ELECTROHOME	143 024 076 196
ELEKTRA	072
ELEMENT	363 494 526
EMERSON	028 048 043 155 005 197 004 047 050 051 076 096 143 151 153 154
ENVISION	116 197
ESA	323
FISHER	007 057
FUJITSU	198 246 346
FUNAI	028 043 052
FUTURETECH	043
GATEWAY	242 268
GE	160 144 165 073 197 008 009 034 056 074 130 155 161 004 157 183
GIBRALTAR	116 073 157 183
GOLDSTAR	113 116 102 004 106 112 119 127 143
HALL MARK	004
HAIER	164 363
HANNSPREE	381
HISENSE	419 442
HITACHI	011 166 004 009 010 012 023 075 143 158 072 250
HP	316 327 378
HUMAX	518
ILO	472
INFINITY	164
INFOCUS	230 330 333 547 548
INTEQ	073 157 183
INSIGNIA	350 354 400 457
JANEIL	002
JBL	164
JCB	070
JCPENNEY	004 024 197 008 009 030 065 101 143 160
JENSEN	013

Code Tables: TV.

Manufacturer/Brand	Set-Up Code Number
JVC	038 034 070 083 199 210 240 241 406
KAWASHO	116 070 197
KEC	043
KENWOOD	197 070
KLEGG	466
KLOSS	002 059
KMC	143
KNOLL SYSTEMS	230
KONKA	457
KREISEN	530
KTV	043 197 143 154
KURAZAI	072
LG	113 116 102 004 106 112 119 127 143 243 284 363
LODGENET	072
LOEWE	164
LOGIK	072
LUXMAN	004
LXI	166 007 138 052 251 160 164
MAGNAVOX	164 059 197 003 060 061 004 063 064 127 022 160 094 239 226 467
MAJESTIC	161 072
MARANTZ	197 164
MATSUI	164
MAXENT	242
MEGATRON	116 197 011
MEMOREX	007 072 004
METZ	088
MGA	197 004 024 028 042
MIDLAND	161 073 157 183
MINERVA	088
MINUTZ	008
MITSUBISHI	109 124 024 004 028 040 042 146 191 348
MONTGOMERY WARD	161 072
MTC	197 004 062 101
NAD	138 025
NEC	132 130 134 197 040 016 024 056 019 237 262 272
NET TV	202
NIKEI	043
NIKKO	116 197
NIKO	527
NORCENT	390
NUVISION	351
OLEVIA	432
ONKING	043
ONWA	043

Code Tables: TV.

Manufacturer/Brand	Set-Up Code Number
OPTIMUS	025
OPTONICA	019 251
OPTOMA	265 270 249
ORION	096
PANASONIC	034 056 080 092 164 208
PHILCO	197 003 059 060 064 164 004 024 056 063
PHILIPS	164 005 093 038 197 003 004 059 127 206 239 259 161
PILOT	116
PIONEER	135 025 197 018 023 116 234 272
POLAROID	323 328 353 354 356 457 494 505
PORTLAND	004 143
PROSCAN	144 160 161 165 167
PROTON	004 112 058 143 171 172 193
PROTRON	498 499
PROVIEW	494
PULSAR	116 073 157 183
QUASAR	034 056 092
RADIO SHACK	019 004 143 043 127
RCA	160 165 065 144 161 197 004 024 056 152 023 074 333
REALISTIC	007 019 043 047
REVOLUTION HD	466
ROCTEC	186
RUNCO	072 169 178 179 180 181 182 183 073 157 342 416
SAMPO	197 058 004 202
SAMSUNG	050 089 101 105 004 127 143 160 228 229 258
SAMSUX	197
SANSUI	096 400
SANYO	166 007 020 053 057 082 187
SCEPTRE	276
SCOTCH	116 197
SCOTT	028 043 004 048 143 497
SEARS	138 030 004 007 028 057 143 094 160 082 165 166
SELECO	189 200 205 011
SHARP	019 014 028 029 004 022 143 175 251 308
SHOGUN	116
SIEMENS	088
SIGNATURE	072
SIMPSON	003
SOLE	231 232
SONY	**070(Default) 139 147 126 185 085 213 277 279**
SOUNDESIGN	028 004 003 043
SOYO	528
SPECTRICON	112
SPECTRONIQ	499

Code Tables: TV.

Manufacturer/Brand	Set-Up Code Number
SSS	004 043
SUPRA	116
SUPRE MACY	002
SUPREME	070
SVA	328
SYLVANIA	197 003 052 059 060 063 064 164 044 160 127
SYNTAX OLEVIA	161 144 160 376 432
TANDY	251
TATUNG	056 062
TECHNICS	034 080
TECHWOOD	004
TEKNIKA	002 003 004 024 028 043 072 101 143
TELEFUNKEN	037 046
TELERENT	072
TERA	172
TMK	004
TOSHIBA	138 030 007 040 062 101 325 230
TOTEVISION	143
TRUTECH	529
UNIVERSAL	008 009
VICTOR	038
VIDEO CONCEPTS	146
VIDIKRON	174 164 188 192 342
VIDTECH	004
VIEWSONIC	242 433
VIKING	002
VIORE	472
VISCO	526
VITO	363
WARDS	004 008 009 019 028 060 061 063 064 072 074 143 164 034
WESTINGHOUSE	076 280 070
YAMAHA	197 004 370
YORK	004
YUPITERU	043
ZENITH	073 072 095 103 157 183 243 284
ZONDA	112

Code Tables: AV Receivers and audio processors.

Manufacturer/Brand	Set-Up Code Number
ADC	007
ADCOM	082 092 225 161 269 355 356
AIWA	170 018 104 202 203 213 211 188
AKAI	189
AMC	125 126 127 281 282
ANGSTROM	42
ANTHEM	335 337
ARCAM	141 418
ATLANTIC TECHNOLOGY	342
AUDIO FILE	071
AUDIO MATRIX	167
AUDIO TECHNICA	134
B & K	096 097
BOSE	070 170 224 347 409 460
BOSTON ACOUSTICS	447
BRIX	555
CARVER	006 028 061 071 201 214 226 185 022 077 284
CINEMA SOUND	134
CITATION	148 272
CLARION	026
DELPHI	515
DENON	109 215 230 234 259 330 340(Default)
ELAN	057 290
ENLIGHTENED AUDIO	099 098
ESCIENT	368 451
FISHER	047 214 182 297
FLEXTRONICS	378
FOSGATE AUDIONICS	231 342
GE	056
GOLDSTAR	008
HARMAN KARDON	231 233 153 154 118 318
HITACHI	020
INTEGRA	275
JAMO	398
JCPENNEY	216
JENSEN	058
JVC	163 191 114 279 291
KENWOOD	026 066 145 192 182 005 280 374
KLH	331
KOSS	216
KRELL	150 072 376 384
KYOCERA	007
LEXICON	120 235 236 237 357 360

Code Tables: AV Receivers and audio processors.

Manufacturer/Brand	Set-Up Code Number
LINN	124 377
LUXMAN	137 139 052 165 115 004 009
LXI	056
MAGNAVOX	086 164 152 208
MARANTZ	006 028 031 040 063 185 186 251 265 119 289 296
MCINTOSH	238 286
MERIDIAN	100 012 013
MITSUBISHI	242 243 204
MONDIAL	157 158 042 043 081 112
MYRYAD	276 293
NAD	186 113 283 478 479
NAKAMICHI	111 244 245 172 183 287
NEC	176
NIRO	343
NILES	403
ONKYO	017 046 108 080 209 275
OPTIMUS	026 041
OUTLAW	342
PANASONIC	032 195 219 177 292 383
PARASOUND	129 130 132 261 294 295 333 334
PHILIPS	249 250 251 063 119
PIONEER	014 039 044 069 168 116 035 078 198 480
POLKAUDIO	515
PROCEED	144 268
RCA	010 048 117 156 067 288
REALISTIC	019 056 073 075 095
ROTEL	074 083 085
RUSSOUND	379 391 392
SAMSUNG	016
SANSUI	040 048 110 119 065 228
SANYO	047 059
SCOTT	019 091
SHARP	026 094 131 175
SHERWOOD	024 102 106 447
SIRIUS	555
SONY	018 247 248 166 101 184 218 271 369 372 380
SOUNDESIGN	036
SSI	068
SUNFIRE	344 345 346
TEAC	005 019 049 111 212 217
TECHNICS	122 176 193 219 178 177 200 257 262
THETA DIGITAL	136
TOSHIBA	060 087 198 278
XM SATELLITE RADIO	515

Code Tables: AV Receivers and audio processors.

Manufacturer/Brand	Set-Up Code Number
YAMAHA	026 253 169 067 173 205 264 232 089 264 274 285 373
ZENITH	143 210

Code Tables: Cable Boxes.

Manufacturer/Brand	Set-Up Code Number
PHILIPS	006 012 013 020 085
PIONEER	043 103 034 051 063 076 105
PULSAR	052
QUEST	112
RCA	047
RCN	074
REGAL	049 050
REGENCY	057
RODGERS	043
SAMSUNG	030
SCIENTIFIC ATLANTA	043 003 041 042 045 046
SEREN	043
SERVICE ELECTRIC	074
SHAW	074
SIGECOM	043
SONY	108
SPRUCER	047
STARCOM	002 004 008 009
STARGATE	008 030 104
SUSQUEHANNA	043 074
TIME WARNER	043 074
TOCOM	039 040 056
TOSHIBA	052
UNITED CABLE	004 053
VERIZON	110
VIDEOTRON	043
WIDE OPEN WEST	043 099
ZENITH	052 060 093 100

Code Tables: AUX -- PVR, TIVO.

Manufacturer/Brand	Set-Up Code Number
HUGHES	001
HUMAX	001
PHILIPS	001
REPLAY NETWORKS	775
SONY	804 805
TIVO	001
TOSHIBA	001

Code Tables: Satellite Boxes.

Manufacturer/Brand	Set-Up Code Number
CABLEVISION	148
DIRECTV	173
DISH NETWORK	122
ECHOSTAR	122
EXPRESSVU	122
GENERAL ELECTRIC	151 116 150
GENERAL INSTRUMENT	148
GOI	122
HITACHI	139 140
HTS	122
HUGHES	114
JVC	122
LG	170
MITSUBISHI	114
MOTOROLA	148
NEXT LEVEL	148
PANASONIC	142 160
PHILIPS	152 153 156 114
PROSCAN	151 116 150
RADIOSHACK	148
RCA	151 116 150
SAMSUNG	155 163 169 175
SKY	164
SONY	115
STAR CHOICE	148
TOSHIBA	127 114 158
VOOM	148
ZENITH	159

Code Tables: AUX -- Gaming Systems.

Manufacturer/Brand	Set-Up Code Number
MICROSOFT / XBOX	408 107
SONY / PS2	414

Code Tables: DVD.

Manufacturer/Brand	Set-Up Code Number
AIWA	146
AKAI	281
ALPINE	098
APEX DIGITAL	087 111 115
BROKSONIC	130
CINEVISION	091
COBY	260
CYBERHOME	271
DENON	138 080 173
DURABRAND	091
DVD 2000	017
EMERSON	091 143
ESA	143
FISHER	147
FUNAI	143
GE	026 027
GO VIDEO	137 091 220 221 222
GOLDSTAR	091
HARMAN KARDON	084 140
HITACHI	101
ILO	268
INITIAL	111
INSIGNIA	143
INTEGRA	142 180
JBL	084
JVC	012
KENWOOD	151
KISS	279
KLH	135
KRELL	104
LEXICON	148
LG	091 057 074
LITEON	264 265
MAGNAVOX	001 096 143 282
MALATA	267
MARANTZ	083 095
MERIDIAN	153
MICROSOFT	027
MINTEK	111 282
MITSUBISHI	017
MYRYAD	102 134
NAD	088
NAKAMICHI	103
ONKYO	076 035 180

Code Tables: DVD.

Manufacturer/Brand	Set-Up Code Number
OPPO	266
OPTIMUS	107
ORION	130
PANASONIC	021 042 138 144 150
PHILIPS	001 083 095 105 166
PHILIPS-MAGNOVOX	035 001
PIONEER	023 092 099 107 108 131
POLAROID	233
POLK AUDIO	035 001
PROCEED	086
PROSCAN	026 027
RCA	026 027
RJTECH	269
SAMSUNG	056 165 170 137 159
SANSUI	154
SANYO	147
SEARS	130
Sensory Science	222
SHARP	094
SONY	033 118 145 126 191
SUPERSCAN	143
SV2000	143
SYLVANIA	143
SYMPHONIC	143
TATUNG	102
TEAC	107
TECHNICS	042
TECHWOOD	088
THOMPSON	026 027
TOSHIBA	035 034 130 141 164 188
VENTURER	149
X-BOX	027
YAMAHA	042 089 166 138 197
ZENITH	057 074 091

Code Tables: Blu-ray & HD DVD.

Manufacturer/Brand	Set-Up Code Number
LG	004
PANASONIC	002
PIONEER	003
SAMSUNG	005
SONY	001
TOSHIBA	006

Code Tables: Video Cassette Recorders (VCR).

Manufacturer/Brand	Set-Up Code Number
AIWA	034 161
AKAI	016 146 043 046 124 125
AMPRO	072
ANAM	145
AUDIO DYNAMICS	012 023 039 043
BROKSONIC	035 037 129
CANON	028 145
CAPEHART	108
CRAIG	003 040 135
CURTIS MATHES	145 041
DAEWOO	111 116 117 119 005 007 010 065 108 110 112
DAYTRON	108
DBX	012 023 039 043
DYNATECH	034 053
ELECTROHOME	059
EMERSON	006 029 035 017 025 027 145 034 036 037 046 101 129 131 153 162 116
FISHER	003 010 008 009
FUNAI	034
GE	145 072 147 063 107 109 144
GO VIDEO	132 136 155 040 115
GOLDSTAR	101 106 114 013 020 012 123
HARMAN KARDON	012 045
HITACHI	004 026 150 018 034 043 063 137 160 013
INSTANTREPLAY	145
JCL	145
JCPENNEY	012 013 015 040 066 101
JENSEN	043
JVC	048 043 130 150 055 060 012 145 050 152 166
KENWOOD	014 048 034 047
LG	101 106 114 013 020 012 123
LLOYD	034
LXI	034 003 009 017 106
MAGIN	040
MAGNAVOX	067 145 034 068 041 156 164
MARANTZ	067 069 012 145 156
MARTA	101
MATSUI	027 030
MEI	145
MEMOREX	101 003 010 014 145 034 053 072 102 134 139
MGA	045 046 059
MINOLTA	013 020
MITSUBISHI	059 061 151 013 020 045 046 051 049 168
MTC	034 040
MULTITECH	024 034

Code Tables: Video Cassette Recorders (VCR).

Manufacturer/Brand	Set-Up Code Number
NEC	012 023 039 043 048
NORDMENDE	043
OPTONICA	053 054
ORION	025
PANASONIC	066 070 145 083 133 140 157 163 074 167
PENTAX	013 020 145 063
PHILCO	145 034 067
PHILIPS	145 067 034 101 054 071 156
PILOT	101
PIONEER	021 013 048
PORTLAND	108
PULSAR	072
QUARTZ	002 014
QUASAR	066 145 075
RADIO SHACK	123
RCA	107 109 144 147 158 041 145 013 020 140 034 040
REALISTIC	003 008 010 014 145 034 040 053 054 101
RICO	058
RUNCO	148
SALORA	014
SAMSUNG	102 104 113 115 112 120 032 040 066 107 109 125
SANSUI	022 043 048 135
SANYO	003 010 007 014 134 102
SCOTT	017 037 112 129 131
SEARS	003 008 010 014 013 101 009 017 073 112
SHARP	149 054 145 159 165
SHINTOM	024
SIGNATURE	034
SONY	056 057 058 057 052 003 078 076 145 149 154
SOUNDESIGN	034
STS	013
SYLVANIA	145 034 059 067
SYMPHONIC	034
TANDY	010 034
TATUNG	039 043
TEAC	034 039 043
TECHNICS	145 070
TEKNIKA	145 019 034 101
THOMAS	034
TMK	006
TOSHIBA	112 131 079 008 059 047 082 013
TOTEVISION	040 101
UNITECH	040
VECTOR RESEARCH	012

Code Tables: Video Cassette Recorders (VCR).

Manufacturer/Brand	Set-Up Code Number
VICTOR	048
VIDEO CONCEPTS	012 034 046
VIDEOSONIC	040
WARDS	003 013 017 024 145 034 040 053 054 131
YAMAHA	012 034 039 043
ZENITH	072 056 048 101 034 058

Code Tables: VCR-TV/VCR Combos.

Manufacturer/Brand	Set-Up Code Number
DAEWOO	005 117
EMERSON	153
FUNAI	034
GOLDSTAR	101 123
HITACHI	034
JCPENNEY	101
LG	101 123
LLOYD	034
MAGNAVOX	034 067
MEMOREX	101
PANASONIC	070 167
PHILIPS	034 067
RADIO SHACK	123
RCA	034
SEARS	101
SONY	057 154
SYLVANIA	067
SYMPHONIC	034
THOMAS	034
ZENITH	034